

D70 White Balance Chart-www.bryanhansel.com

Color Temp (K)	Light Type	Incandes	Fluoresc	Dir Sun	Flash	Cloudy	Shade
2000	Pre-Sunrise						
2700	Sunrise/set	+3	+3				
2800		+2					
2900		+1					
3000		0	+2				
3100		-1					
3200	1 hour after or before sunrise/set	-2					
3300		-3					
3400							
3700		+1					
3900	2 hr af or bf Sunrise/set	0					
4200							
4800	Sunlight: Normal		+3	+3			
4900				+2			
5000			-1	+1	+2		
5200				0	+1		
5300				-1			
5400				-2	0	+3	
5600				-3	-1	+2	
5800						+1	
5900					-2		
6000		Sunlight: Bright Day			-3	0	
6200					-1		
6400					-2		

D70 White Balance Chart-www.bryanhansel.com

Color Temp (K)	Light Type	Incandes	Fluoresc	Dir Sun	Flash	Cloudy	Shade
2000	Pre-Sunrise						
2700	Sunrise/set	+3	+3				
2800		+2					
2900		+1					
3000		0	+2				
3100		-1					
3200	1 hour after or before sunrise/set	-2					
3300		-3					
3400							
3700		+1					
3900	2 hr af or bf Sunrise/set	0					
4200							
4800	Sunlight: Normal		+3	+3			
4900				+2			
5000			-1	+1	+2		
5200				0	+1		
5300				-1			
5400				-2	0	+3	
5600				-3	-1	+2	
5800						+1	
5900					-2		
6000		Sunlight: Bright Day			-3	0	
6200					-1		
6400					-2		

D70 White Balance Chart-www.bryanhansel.com

Color Temp (K)	Light Type	Incandes	Fluoresc	Dir Sun	Flash	Cloudy	Shade
6500	Sunlight: Bright Day	-2					
6600						-3	
6700	Overcast						+3
7000							
7100							+2
7200		-3					
7500						+1	
8000	Hvy overcast shade					0	
8400						-1	
8800						-2	
9200	Rain					-3	

D70 White Balance Chart-www.bryanhansel.com

Color Temp (K)	Light Type	Incandes	Fluoresc	Dir Sun	Flash	Cloudy	Shade
6500	Sunlight: Bright Day	-2					
6600						-3	
6700	Overcast						+3
7000							
7100							+2
7200		-3					
7500						+1	
8000	Hvy overcast shade					0	
8400						-1	
8800						-2	
9200	Rain					-3	

PRE: The Preset returns WB from a picture of a grey or white object. To do this put a white or grey object in the light of the final photograph. Select PRE in the control panel. Hold WB button until PRE flashes. Fill viewfinder with the white or grey object. Take a picture. It worked in Good flashes in the control panel or Gd in the viewfinder. Push the shutter release half-way to shoot again.

PRE: The Preset returns WB from a picture of a grey or white object. To do this put a white or grey object in the light of the final photograph. Select PRE in the control panel. Hold WB button until PRE flashes. Fill viewfinder with the white or grey object. Take a picture. It worked in Good flashes in the control panel or Gd in the viewfinder. Push the shutter release half-way to shoot again.